


GOLF NETS

APEX STANDARD


Golf Nets. +44(0)1179539353. Fax +44(0)1179231251 e-mail: helpdesk@golfnetsonline.com www.golfnetsonline.com

IMPORTANT
GOLF BALLS CAN BE DANGEROUS AND
USERS ARE ADVISED TO KEEP PETS AND
CHILDREN AWAY FROM THE PRACTICE
AREA DURING NET PRACTICE.
DO NOT LEAVE BAFFLE UP DURING
WINDY CONDITIONS AS IT MAY ACT AS A
SAIL AND DAMAGE THE NET.

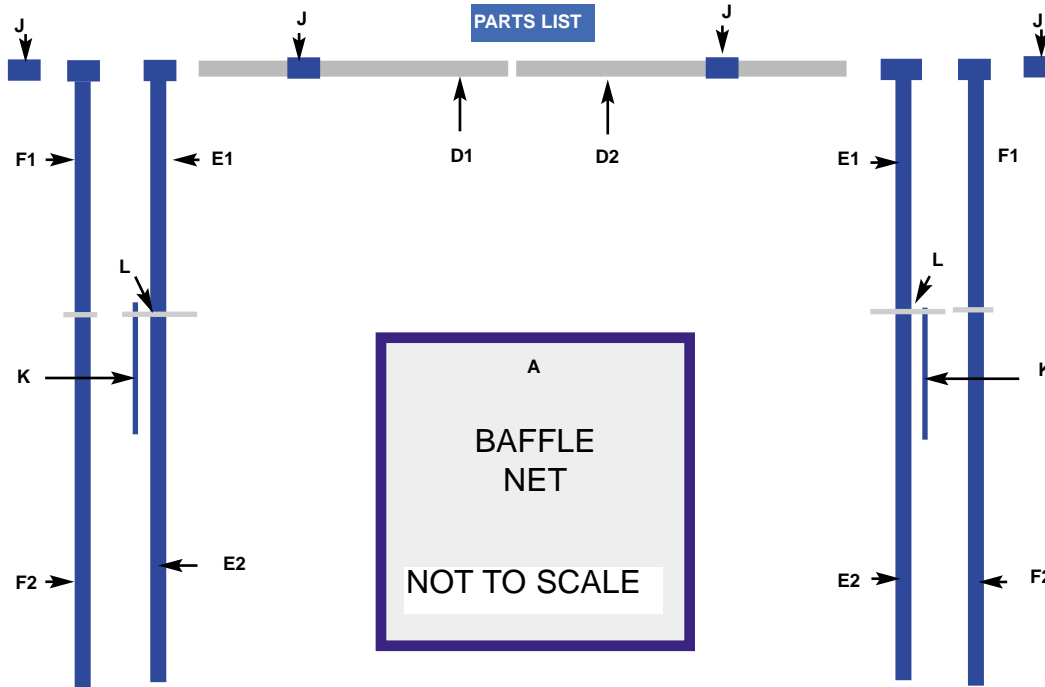

PARTS LIST

- A Baffle Net
- B Surround Net
- D1 Top Bar Male
- D2 Top Bar Female
- E1 Front Leg Top half
- E2 Front Leg Lower half
- F1 Rear leg Top half
- F2 Rear Leg Lower half
- J Ring Clamps
- K Leg spacer
- L Bolt and Wingnut for leg spacer

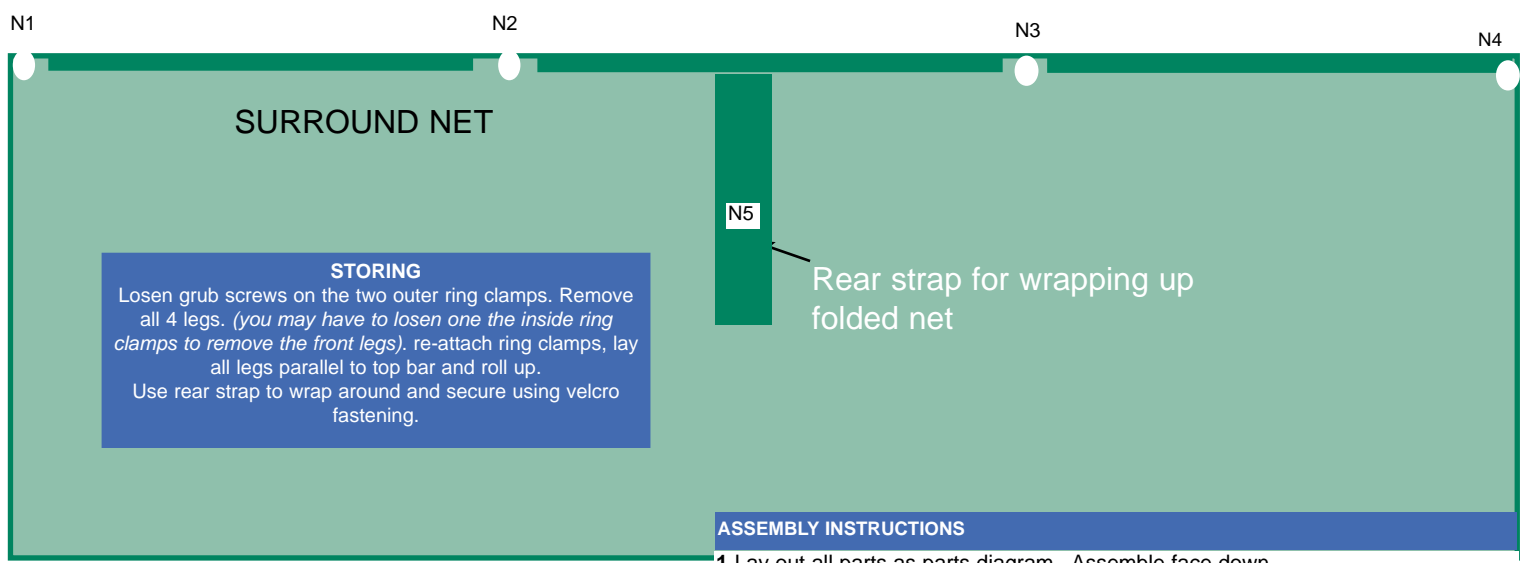

ASSEMBLY INSTRUCTIONS

- 1 Lay out all parts as parts diagram . Assemble face down.
- 2 *Screw together top bar (D1) & (D2) and both front and rear legs. (E1) & (E2), and (F1) & (F2). 3 Thread the top bar through the selvage in the net at (N2-N3).
- 4 Slot a ring clamp (J) at each end of the exposed top bar.
- 5 Slide a front leg down either side of net at (N1--N2) and (N3-N4).
- 6 Slot the front legs onto the top bar and then the rear legs. Secure either side with remaining ring Clamps (J).
- 7 Attach leg spacer (K) to front leg (E1) Lift rear leg and attach other end of leg spacer. Repeat process for the other legs.
- 8 By lifting and pulling back rear net strap (N5) the assemblage should lift into place.
- 9 Attach baffle net to (N) with cable ties.
- 10 Roll up surplus netting to form a cushion at the base of the net to prevent low hit balls from passing under the net
- 11 When not in use or In high winds dismantle or lay net on face down.

* It is advisable to place a little oil or grease on the screw threads

